


X1

File=s2q\_test5\_a.cir

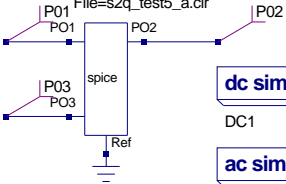

**dc simulation**

DC1

**ac simulation**

AC1  
Type=log  
Start=1 Hz  
Stop=100 kHz  
Points=100